

Updated: **23. April 2006**

DigiSpeed-XL™ DC-02

Isolated Control Voltage Generator

User's Guide

DigiSpeed-XL™ PCB Ver:4.0
Firmware Ver: 4.0
Mach3 Ver: 1.84

Homann Designs

20 View St
HIGHETT VIC, 3190
AUSTRALIA

info@homanndesigns.com
<http://www.homanndesigns.com>

Copyright 2006 © Homann Designs. All rights reserved.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Homann Designs.

Disclaimer

Homann Designs makes no representation or warranties with respect to the contents hereof and specifically disclaim any implied warranties or merchantability or fitness for any particular purpose. Information in this publication is subject to change without notice and does not represent a commitment on the part of Homann Designs.

Feedback

We appreciate any feedback you may have for improvements on this document. Please send your comments to info@homanndesigns.com

Trademarks

DigiSpeed™ and DigiSpeed-XL™ are trademarks of Homann Designs. All other brand and product names mentioned herein are trademarks, services marks, registered trademarks, or registered service marks of their respective owners and should be treated as such.

Table of Contents

1 Introduction.....	5
1.1 Contents.....	5
1.2 Overview.....	6
2 Options.....	7
2.1 External Manual speed potentiometer.....	7
2.2 Auto control only.....	7
2.3 MiniDin Connector J2.....	7
2.4 3.5mm Stereo Connector J1.....	7
2.5 Mode Indicator LEDs D3 & D4.....	7
3 Features.....	8
4 Board Description.....	9
4.1 Introduction.....	9
4.2 Manual/ Computer Control Selection.....	10
4.3 LED Indicators.....	10
4.3.1 Manual Mode Indicator.....	10
4.3.2 Computer Control Mode Indicator.....	10
4.3.3 Direction Relay Indicator.....	11
4.3.4 Zero Speed Relay Indicator.....	11
4.3.5 Control Voltage Indicator.....	11
4.4 Manual Speed Potentiometer.....	11
4.5 Manual Speed Trimpot.....	11
4.6 Zero Speed Relay.....	12
4.7 Direction Relay.....	12
4.8 Control Voltage Attenuator.....	12
4.9 Mode Selection Jumper Block JP1.....	13
5 Quick Start Guide.....	14
5.1 What you need.....	14
5.2 Mach3 Configuration Setup.....	14
5.2.1 Port Setup.....	15
5.2.2 Motor Outputs Tab.....	15
5.2.3 Input Signals Tab.....	16
5.2.4 Output Signals Tab.....	17
5.2.5 Spindle Setup Tab.....	17
5.3 Power to the DigiSpeed-XL.....	18
5.4 Enable the DigiSpeed-XL.....	19
5.5 Connect the PWM Signal.....	19
5.6 Connect the Spindle Direction.....	19
5.7 Connect the Spindle Index Input.....	20
5.8 Conclusion.....	20
6 Installation.....	20
6.1 DC Motor Speed Controller housing.....	21
6.2 Wiring installation.....	21
6.2.1 Motor Controller Connection.....	21
6.2.2 Mini Din Control Cable.....	21

6.2.3 Spindle Index sensor Cable.....	22
6.2.4 Potentiometer flying leads.....	23
6.2.5 Initial Testing.....	23
6.2.5.1 Manual Speed potentiometer Control.....	23
6.2.5.2 Computer Speed Control.....	23
7 Operation.....	24
7.1 Operation Modes.....	24
7.1.1 PWM Input Mode.....	24
7.1.2 Step/Dir Mode.....	25
7.1.3 Up/Down Mode.....	26
7.1.4 Synchronous Serial Mode.....	26
7.1.4.1 Interface Specification.....	27
7.1.4.2 Command Format.....	27
7.1.4.3 Set Speed with motor offsets enabled.....	27
7.1.4.4 Set Speed with motor offsets disabled.....	28
7.1.4.5 Write Motor offset to Flash Memory.....	28
7.2 Motor Compensation Offsets.....	29
7.3 Control Voltage Inversion.....	30
8 Board Dimensions.....	31

Index of Tables

Table 1: Zero Speed Relay Contacts.....	12
Table 2: Direction Relay Contacts.....	12
Table 3: Mode Select Jumper Block.....	13
Table 4: MiniDin Breakout Board Terminal Strip Connections.....	15
Table 5: Mode Selection Jumpers.....	24

Illustration Index

Illustration 1: Jumper Block JP1.....	13
Illustration 2: Mach3 Port Setup.....	15
Illustration 3: Mach3 Motor Outputs Tab.....	16
Illustration 4: Mach3 Input Signals Tab.....	16
Illustration 5: Mach3 Output Signals Tab.....	17
Illustration 6: Mach3 Spindle Setup Tab.....	18
Illustration 7: PCB Dimensions and Layout.....	31

***** WARNING *****

The KB Electronics DC speed controller circuit, and other similar speed controllers as found in Asian imported mini lathes and mini mills are at mains voltage potential. This voltage is lethal. Do not attempt to do this conversion if you are not qualified to do so.
Confidence is no replacement for qualification!

If you feel that this project is beyond your abilities to SAFELY complete, we can install the unit for you. Please contact us for details

Please ensure you read the complete manual before attempting to install or use this device.

1 Introduction

Thank you for purchasing Homann Designs' DigiSpeed-XL™ *DC Motor Speed controller interface unit*. The DigiSpeed-XL™ provides a way for controlling DC motor speed controllers that accept a 0-5Vdc, 0-10Vdc signal, or a manual speed potentiometer.

This document is a User's Guide that describes the operation of the *DigiSpeed-XL™*. The document contains information on how to use and integrate the board into your own systems.

1.1 Contents

The box received when ordering the DigiSpeed-XL™ contains the following:

- DigiSpeed-XL™ DC motor speed controller.
- 4 x 0.1" jumpers.
- 4 x 4mm PCB stand-offs.
- * 6 Pin minidin male-to-male cable.
- * 3.5mm stereo male-to-male cable.
- * MiniDin Breakout board.

* - Note These items are included with the DigiSpeed-XL™ Deal purchase.

1.2 Overview

The DigiSpeed-XL™ DC motor controller is designed to allow computer CNC programs such as Mach2, TurboCNC and other CNC programs to control the spindle speed of CNC machines such as Mills and Lathes.

DigiSpeed-XL™ is designed primarily for use with KB Electronics style DC motor controllers, such as the KBIC-120. This is the type of controller found in the Sherline Mills and Lathes. DigiSpeed-XL™ will work with other types of DC motor controllers such as those found in the Asian imported mini lathes and Mills.

The DigiSpeed-XL™ is also well suited for use with VFDs and other motor speed controllers which accept a 0-5Vdc, 0-10Vdc speed control voltage.

DigiSpeed-XL™ is designed to replace the manual speed setting potentiometer found in these controllers. The DigiSpeed-XL™ contains a potentiometer on board to still allow for manual speed control when desired

The form factor of the DigiSpeed-XL™ PCB has been designed for easy installation. Due to its compact size, it can also be installed unobtrusively into many of the existing speed controller enclosures.

2 Options

The DigiSpeed-XL™ is a versatile unit. It has on-board LED indicators, a manual/auto switch and an on-board 10KΩ manual speed potentiometer. The board is designed to be installed into existing motor speed controller housings, external CNC housings or other enclosures. Therefore not all users may want these on-board components.

If you would like any of the following options, please notify us at the time of placing the order.

2.1 External Manual speed potentiometer

If the DigiSpeed-XL™ is to be mounted into an existing speed control housing, it may be desirable to utilise the existing manual speed potentiometer. If this is the case, the on-board potentiometer can be left unpopulated by the factory with a 3.5mm, 3-pin screw terminal block J4 inserted. This will allow the existing Speed controllers potentiometer to be connected.

2.2 Auto control only

In certain cases it may be desirable to have the motor speed controller to be controlled exclusively by the Computer via DigiSpeed-XL™. In this instance, the on-board potentiometer and the auto/manual switch can be left unpopulated by the factory.

2.3 MiniDin Connector J2

The DigiSpeed-XL™ comes standard with the 6pin Minidin connector (J2) installed on the board. This connector is the primarily connector for communicating with the PC. The board also contains a 0.1", 6 pin header J3, that may be used for the same purpose.

As a requested option, J2 may be left unpopulated. Additionally J3 can be replaced by a 0.1" screw terminal block.

2.4 3.5mm Stereo Connector J1

The 3.5mm stereo conector (J1) is for connecting a spindle index sensor to the PC by routing it through the DigiSpeed-XL™ cables. The board also contains a 0.1", 3 pin header J7, that may be used for the same purpose.

As a requested option, J1 may be left unpopulated.

2.5 Mode Indicator LEDs D3 & D4

If the DigiSpeed-XL™ into be installed inside an enclosure, it may be desirable to have the Mode Indicator LEDs D3 and D4, inserted on the component side of the board or replaced by 2-pin 0.1" Molex connectors. This may be requested when ordering the unit.

3 Features

The main features of the DigiSpeed-XL™ controller are;

- Controlled by a RISC Microchip micro-controller.
- PCB
 - FR4 Material
 - Double Sided, Plated through holes
 - Silk-Screened on Component Side
 - Solder Mask on Both Sides
- Small PCB footprint 80mm(L) x 54mm(W)
- Four 4mm mounting holes
- 5V dc 50mA power requirements.
- Opto-isolation between the computer logic Voltages and the DC Speed controller voltages.
- Maximum DC Speed controller voltage for the control supply of 24Vdc
- Greater than 1000 steps from 0 to Max Speed.
- Four methods to control motor speed.
 - PWM - A low frequency PWM signal. (1Hz – 50Hz)
 - Step/Dir – Can be controlled like a stepper motor
 - Up/Down – Can be controlled via separate up/down inputs
 - Synchronous Serial - Can be controlled by a serial Data, Clock interface
- Enable input to control to enable or inhibit the control voltage output.
- All signals are Active Low to reduce the possibility of inadvertent spindle control
- Programmable motor characteristics allow the DigiSpeed-XL™ to compensate for drag and inefficiencies in the motor drive system.
- Output Control Voltage Attenuator.
- Configurable inverse control voltage output mode.
- Toggle switch to select Manual or Computer control
- PCB mounted 10KΩ potentiometer for manual speed control.
- Zero Speed Mini Relay that can be used for spindle brake activation.
- Direction Mini Relay that is energised by the state of the input direction signal.
- Multi color LED indicating the mode and state of the DigiSpeed-XL™ controller.
- SMT LEDs indicating when Zero Speed or Direction Mini Relays are energised.
- SMT LED indicating the amplitude of the control voltage being generated.
- Uses standard Mini Din connector and cables to interface to the Controller.
- Connector for attaching a Spindle speed sensor. It provides a 5V supply and input for the index signal to be feed to the breakout board via the Mini Din cable. This feature tidies up the cable run cable. Also includes a 4.7 KΩ pull-up resistor.

4 Board Description

4.1 Introduction

The DigiSpeed-XL™ controller provides the capability to control the spindle speed of a DC or AC motor via computer control, or using the existing manual control potentiometer.


The DC motor controllers that the DigiSpeed-XL™ is designed to work with such as the KBIC-120 controller supplied by KB Electronics, use a “Hot Ground” circuitry. That is, the reference voltages for setting the speed are at MAINS POTENTIAL voltage. This voltage is dangerous and can be lethal.

This style of controller uses a control voltage, usually in the 0 – 10Vdc range to control the motor speed from 0 – max speed. In reality, this voltage can be anywhere in the range of 9Vdc to 15vdc. The maximum speed of the motor can be limited by a trim-pot that reduces this control voltage supply.

AC motor controllers are usually Variable Frequency Drives (VFD) and have terminals for the connection of an external manual control potentiometer, or a 0-5Vdc, 0-10Vdc control voltage.

The DigiSpeed-XL™ circuitry is essentially in two parts. One part contains low voltage logic level circuitry that includes a micro controller and interfaces to the PC via the parallel port. It is supplied by 5Vdc that is referenced to the PC parallel port ground. The other part of the DigiSpeed-XL™ circuitry is connected to the DC Speed controller control circuitry. This part is at **MAINS POTENTIAL**.

The two parts of the circuitry are separated by opto-isolation. This ensures that the dangerous MAINS POTENTIAL voltages are kept away from the low level logic circuitry. The two parts of circuitry must never be connected together. If it happens, a catastrophic failure of the DigiSpeed-XL™ circuit and your PC will occur.

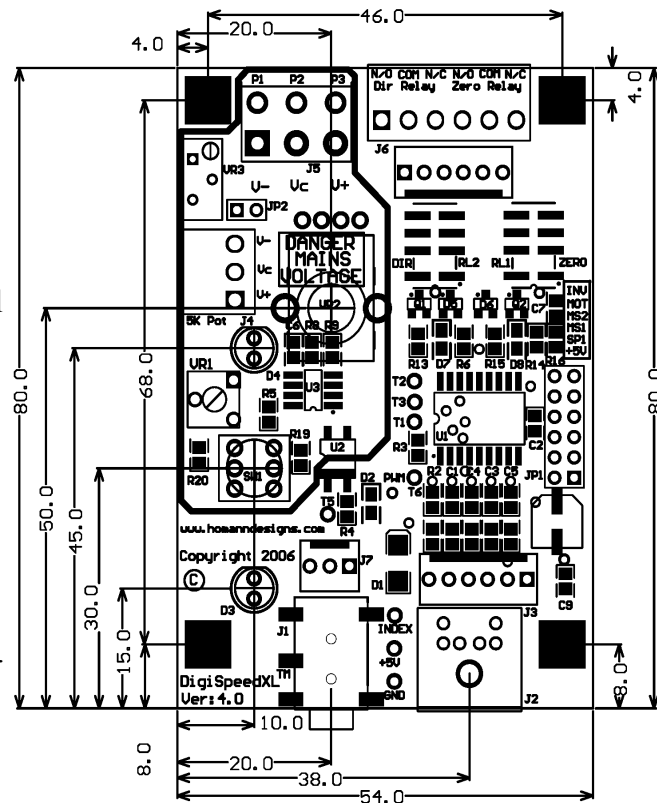

*****YOU HAVE BEEN WARNED*****
DO NOT GROUND THE MAINS POTENTIAL SIDE OF THE CIRCUITRY



The DigiSpeed-XL™ controller provides a control voltage in place of the control voltage provided by the manual speed control potentiometer. This voltage can be varied from 0V to 100% of the maximum control voltage by computer software.

There are 1023 steps from 0 to the maximum control voltage. If your maximum spindle speed is 6000 rpm, this effectively provides for a 6-rpm resolution in controlling spindle speed.

4.2 Manual/ Computer Control Selection

Selection between manual or computer control of the DigiSpeed-XL™ is done via the toggle switch mounted on the board. When the switch is toward the Mini Din connector, the DigiSpeed-XL™ is in Computer control. When positioned toward the three flying leads, the DigiSpeed-XL™ is in manual mode.

4.3 LED Indicators

The DigiSpeed-XL™ controller has two 5mm Mode indicator LEDs, one to indicate when Manual mode is selected, the other to indicate the mode and status of the computer interface.

Additionally, the board contains 3 Surface Mount Technology (SMT) LEDs.

4.3.1 Manual Mode Indicator

The manual mode indicator is the LED positioned adjacent to the manual speed potentiometer. When the toggle switch is in the manual position, the LED will illuminate, indicating this mode is active.

4.3.2 Computer Control Mode Indicator

The computer control mode indicator is the LED positioned towards the Mini Din connector. Regardless of the position of the toggle switch, the LED will illuminate in a number of ways, indicating the mode and state of the computer interface.

- **LED Off** – This indicates that there is no power supplied to the DigiSpeed-XL™ via the mini din connector
- **Solid Colour** – A Solid colour indicates that power is supplied to the DigiSpeed-XL™ via the Mini din connector, and that the Enable line is NOT active. There are three solid colours indicating the input mode.

- **RED** – Indicates that the DigiSpeed-XL™ is in PWM input Mode.
- **GREEN** – Indicates that the DigiSpeed-XL™ is in either STEP/DIR or UP/DOWN input mode.
- **YELLOW** – IBoth red and green LEDs on indicates that the DigiSpeed-XL™ is in SYNCHRONOUS SERIAL input Mode
- **Lazy RED Double Flash** – Indicates that the DigiSpeed-XL™ is powered On, the Enable is active and the speed is zero. At this stage, hands should be kept clear of the spindle as it is ready to start.
- **Fast RED Flash** – Indicates that the DigiSpeed-XL™ is powered, the Enable is active and the speed is greater than zero. The spindle should be spinning as long as the set speed is large enough to over come the motor drag and inefficiencies. Of the motor drive train.

4.3.3 Direction Relay Indicator

The direction relay indicator is a SMT LED D6, positioned immediately below the Relay. The LED illuminates to indicate the relay has been energised.

4.3.4 Zero Speed Relay Indicator

The Zero Speed relay indicator is a SMT LED D7, positioned immediately below the Relay. The LED illuminates to indicate the relay has been energised.

4.3.5 Control Voltage Indicator

The Control Voltage indicator is the SMT LED D2, positioned in the lower centre of the PCB. The LED illuminates indicating a control voltage is being generated. The intensity of the illumination provides an indication of the voltage being generated.

4.4 Manual Speed Potentiometer

The DigiSpeed-XL™ has 10KΩ potentiometer VR2, mounted onto the PCB. This potentiometer is used when the mode select toggle switch is in the Manual position.

Turn the potentiometer clockwise to increase the control voltage, counter-clockwise to decrease the speed.

4.5 Manual Speed Trimpot

The DigiSpeed-XL™ has a small blue trimpot VR1, for adjusting the maximum manual speed of the motor, when in Manual mode.

VR1 allows the user to adjust the maximum speed of the motor when under manual mode so that is the same as the maximum speed when under computer control.

4.6 Zero Speed Relay

The DigiSpeed-XL™ contains a miniature relay which is energised, when the commanded speed is zero. The relay is rated at 1A @ 30V or 3A @ 125Vac.

This relay may be used for activating a spindle brake mechanism, warning indicator or other device. For switching heavy loads, it may be necessary to switch the relay coil of a larger power relay.

The contacts for the relay may be access through connector J6.

<i>Terminal</i>	<i>Function</i>
J6-4	Zero Relay Normaly Open (N/O) contact
J6-5	Zero Relay Common (C) contact
J6-6	Zero Relay Normaly Closed (N/C) contact

Table 1: Zero Speed Relay Contacts

4.7 Direction Relay

The DigiSpeed-XL™ contains a miniature relay which is energised, as a function of the Direction signal. The relay is rated at 1A @ 30V or 3A @ 125Vac.

This relay may be used for activating a spindle reversing mechanism, warning indicator or other device. For switching heavy loads, it may be necessary to switch the relay coil of a larger power relay.

The contacts for the relay may be access through connector J6.

<i>Terminal</i>	<i>Function</i>
J6-1	Direction Relay Normaly Open (N/O) contact
J6-2	Direction Relay Common (C) contact
J6-3	Direction Relay Normaly Closed (N/C) contact

Table 2: Direction Relay Contacts

4.8 Control Voltage Attenuator

The DigiSpeed-XL™ contains a 1KΩ multi-turn trimpot VR3 that can be used to attenuate the control voltage fed to the motor controller.

To use this function, JP2 must be inserted. This creates a voltage divider so that the maximum output voltage may be reduced.

Some VFDs and motor controllers require a 0 – 5Vdc voltage to control spindle speed, yet provide a 10Vdc voltage supply. In this instance, the attenuator may be used to reduce the 10V control voltage to 5V as required by the controller.

Note: For this function to be used, the 10Vdc supply must be capable of providing at least 15mA. If the motor controller is incapable of meeting the current requirements, the 10Vdc supply may be provided by an external isolated plug pack.

4.9 Mode Selection Jumper Block JP1

The DigiSpeed-XL™ can operate in a number of modes, depending on the type of control signal that is provided by your CNC software. The mode is selected via the mode selection jumpers as shown in the picture below;

Jumper JP1 consists of a six jumpers . The labels for each jumper is printed above the block, and described below.

<i>Jumper</i>	<i>Function when inserted</i>
INV	Accepts an inverted PWM input signal
MOT	Removes the Motor compensation offsets
MS2	Mode Select
MS1	Mode Select
SP1	Not Used
+5V	Not Used

Table 3: Mode Select Jumper Block

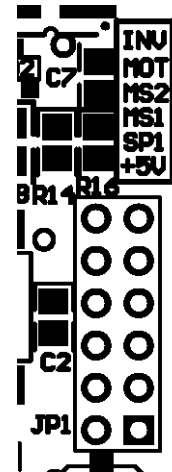


Illustration 1:
Jumper Block JP1

5 Quick Start Guide

This section is intended to allow you to quickly setup and verify the operation of your DigiSpeed-XL™ controller with Mach3. Initially, this will be done with the DigiSpeed-XL™ unit being connected to computer but not your Motor Drive. Once you are familiar with the operation of the DigiSpeed-XL's operation, it can then be connected to the motor drive.

The DigiSpeed-XL™ circuitry is essentially in two parts. One part contains low voltage logic level circuitry that includes a micro controller and interfaces to the PC via the parallel port. It is supplied by 5Vdc that is referenced to the PC parallel port ground. The other part of the DigiSpeed-XL™ circuitry is connected to the DC Speed controller control circuitry. This part is at **MAINS POTENTIAL**.

The quick start setup will verify the connection to the Microprocessor and logic side of the DigiSpeed-XL™ controller.

5.1 What you need

To get started, you need:

- DigiSpeed-XL™ controller.
- 6-pin Male to Male Minidin cable.
- MiniDin Breakout Board
- Breakout board or other mechanism for connecting the DigiSpeed-XL™ control lines to the Computer Printer port.
- A PC with a printer port and Mach3 installed and running.

Note, you may substitute the 6 pin mindin cable and Minidin breakout board with another cable, etc, depending on your wiring and CNC controller configuration.

The MiniDin breakout board connects to your CNC controller breakout board by wiring to the 6-pin screw terminal block on the MiniDin breakout board.

This quick start setup is done with the DigiSpeed-XL™ unit sitting on the bench and NOT connected to your Motor controller.

Mach3 controls the DigiSpeed-XL™ in PWM mode only. Therefore you need to remove any jumpers from the mode selection jumper block JP1

5.2 Mach3 Configuration Setup

The example setup describes how Mach3 is configured for the DigiSpeed-XL™. Your configuration may differ depending on what Printer Port number you are using, and what pins in the port are connected to which DigiSpeed-XL™ pins.

For this example, printer port 2 is being used with the port pins connected as shown in Table 4 below.

Notes:

1. It is advisable to use a breakout board between the Printer port and the DigiSpeed-XL™.
2. The 5V supply for the DigiSpeed-XL™ must be obtained from the breakout board, as it cannot be supplied from the printer port.

Signal	Printer Port Pin Number	PC Input/Output	MiniDin Breakout Board Terminal Strip Pins
PC Parallel Port GND (0V)	18-25	-	1
PWM	1	Out	2
Direction	17	Out	3
Enable	16	Out	4
Index	15	In	5
5Vdc with respect to Pin 1	-	-	6

Table 4: MiniDin Breakout Board Terminal Strip Connections

5.2.1 Port Setup

From the *Options* menu in Mach3, select the *Ports & Pins Setup* item. As shown in Illustration 2 below, Port 2 is enabled and is set to the default printer port address 0X378. The other items on this page are not concerned with the DigiSpeed-XL™ Setup.

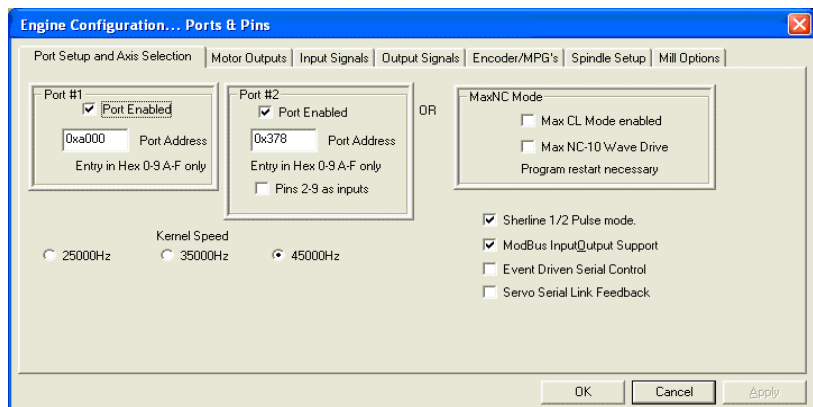


Illustration 2: Mach3 Port Setup

5.2.2 Motor Outputs Tab

Select the *Motor Outputs* tab and enable the *Spindle* Axis. Set the Port and Pin numbers that will be used for the DigiSpeed-XL™ PWM (Step) and Dir lines. As can be seen in Illustration 3 below, The PWM signal pin has been set to 1, the Dir signal set to 17. The port number for both of these pins has been set to Port 2 in line with the previous port setup.

Active Low signals have been selected for both of these pins, as the DigiSpeed-XL™ operates with Active Low signals for safety reasons.

Note: If you are not planning to run the spindle in reverse (Most installations) you do not

need to connect the Spindle Dir pin. Just set the pin number to 0. This uses one less printer port pin that may be used for other functions.

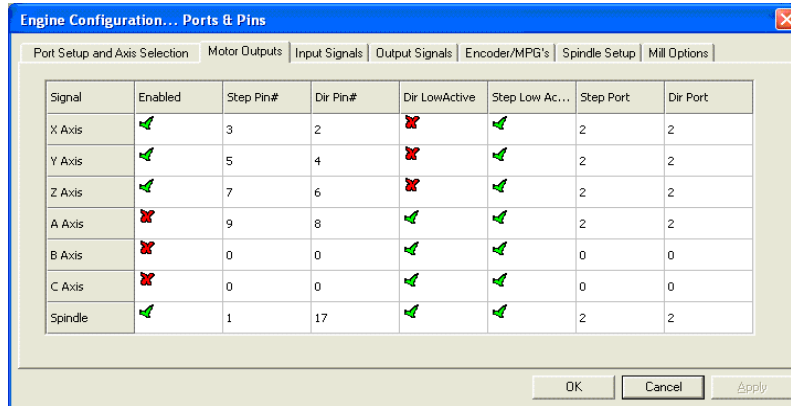


Illustration 3: Mach3 Motor Outputs Tab

5.2.3 Input Signals Tab

If you have a spindle index sensor and plan to feed it into Mach 3 via the DigiSpeed-XL™ cables, you need to set it up in the Input Signals Tab as shown in Illustration 4 below. In this example the Index input is enabled, Set to pin 15 or port 2. It is also selected as an Active Low Signal.

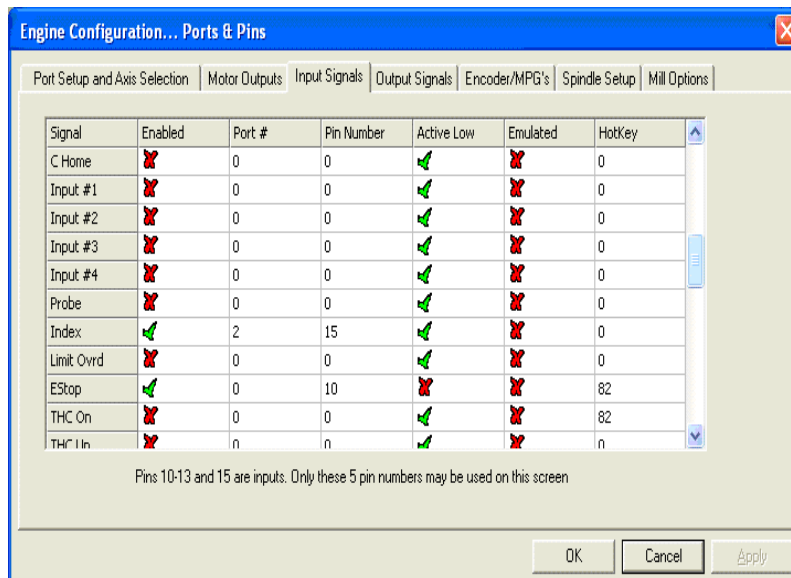


Illustration 4: Mach3 Input Signals Tab

5.2.4 Output Signals Tab

The Outputs Tab is used to setup the printer port pin that is to be used for activating the DigiSpeed-XL™ enable line. As shown in Illustration 5 below, Output #1 has been chosen to be used as the DigiSpeed-XL™ Enable Line. It has been configured to act on pin 16 of port 2. Again this signal is Active Low and has been selected as such.

Notes:

1. The Signal used to control the DigiSpeed-XL™ Enable line does not have to be Output #1, and can be select to be any of the output signals Output #1-6.
2. If you are short of output pins, the DigiSpeed-XL™ Enable line may be tied to ground, permanently enabling the DigiSpeed-XL™. In this situation the DigiSpeed-XL™ is solely relying on the Spindle Speed to be set to zero to disable the spindle. This is NOT recommended.

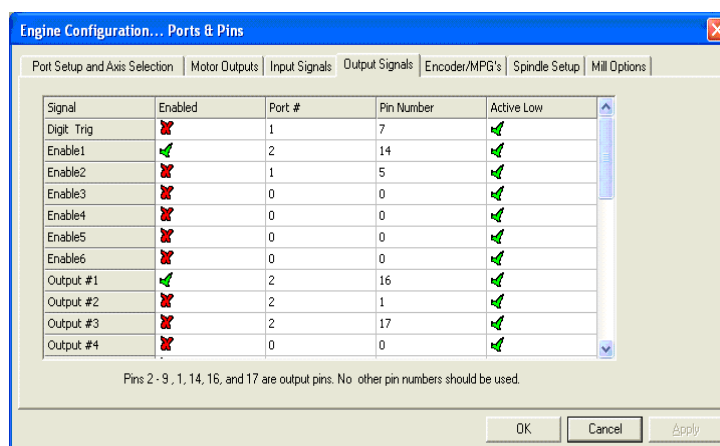


Illustration 5: Mach3 Output Signals Tab

5.2.5 Spindle Setup Tab

The Spindle setup tab is used to configure various option regarding the Spindle operation. As shown in Illustration 6 below, the following items are configured:

- Relay Control – The disable spindle relays checkbox is not selected as these outputs are used to control the DigiSpeed-XL™ enable line. Both the CW (M3) and CCW (M4) commands are used to control the same output signal (Setup in the preceding paragraph). For this example Output #1 is used.
- Motor Control – As shown below, the following items are setup:
 - The Use 'Spindle Motor Output' check box is ticked.

- The 'PWM Control' check box is ticked.
- The PWM base frequency is set to 50.
- The minimum PWM % is set to 0
- Pulley ratios – The maximum spindle speeds for the pulley ratios you have are set up to allow Mach3 to calculate the required PWM percentage.

This now concludes the configuration of the Mach3 software for the DigiSpeed-XL™. The next step is to hook up the unit to your breakout board for testing.

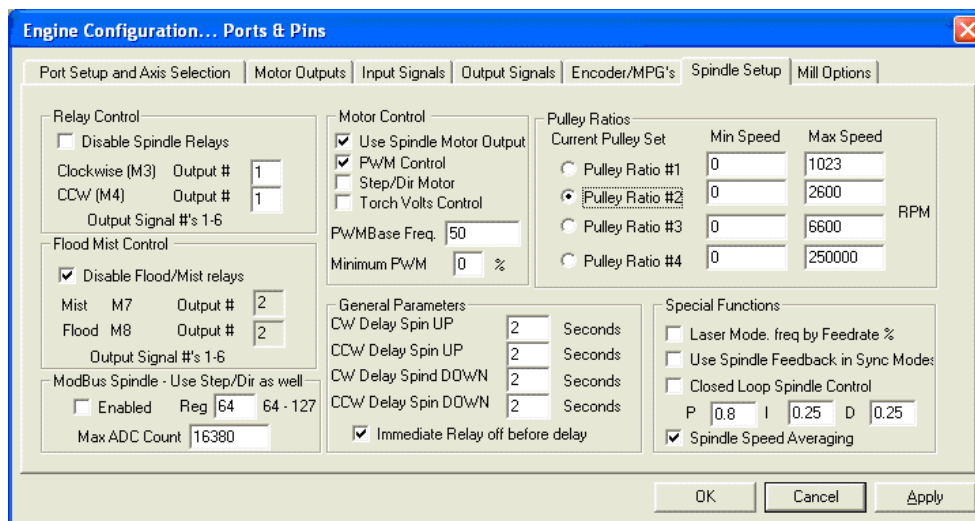


Illustration 6: Mach3 Spindle Setup Tab

5.3 Power to the DigiSpeed-XL

The first step in the installation is to provide 5V power to the DigiSpeed-XL™ controller. Wire Pin1 of the MiniDin breakout board (DigiSpeed-XL™ GND) to a logic ground terminal on your CNC controller breakout board. This logic ground is the same as the PC printer port 0V potential, found on pins 18 to 25 of your printer port.

Wire Pin 6 of the MiniDin breakout board (DigiSpeed-XL™ 5V supply) to a 5Vdc supply on your CNC controller's breakout board. This needs to be 5Vdc with respect to the PC printer port ground.

Note: You could also obtain the 5V from a USB port on your computer.

Plug the 6-pin Male to Male minidin cable into the DigiSpeed-XL™ and the MiniDin breakout board.

Turn on your CNC controller. This should provide the 5Vdc supply to the DigiSpeed-XL™. Verify this is the case, by checking that the Computer Control Mode Indicator LED is on solid and is RED in colour. If not, turn off the CNC controller and check the wiring.

5.4 Enable the DigiSpeed-XL

Wire Pin 4 of the MiniDin breakout board (DigiSpeed-XL™ Enable) to pin 16 of your printer port via your CNC controller's breakout board. This needs to transition between 0V and 5V with respect to the printer port ground.

Note: The DigiSpeed-XL™ uses negative logic for its control inputs. This means that a logic 0 is required to enable the DigiSpeed-XL™. The purpose for this is to minimise accidental enabling of the unit.

You can now toggle the DigiSpeed-XL™ enable line by clicking on the “Spindle” button in Mach3. Alternatively, you can use the M03 and M05 commands in MDI mode.

When the DigiSpeed-XL™ is enabled, you should be able to observe the DigiSpeed-XL™ Mode Indicator LED perform a Red lazy double flash. This indicates that the DigiSpeed-XL™ is enabled and that the commanded speed is Zero. (With the PWM signal line not connected, the speed will be zero). Additionally, you should see the Zero Speed relay indicator illuminate.

Note: Setting a speed value in Mach3 will have no effect as the PWM signal has not been connected to the DigiSpeed-XL™.

5.5 Connect the PWM Signal

Wire Pin 2 of the MiniDin breakout board (DigiSpeed-XL™ PWM) to pin 1 of the printer port via your CNC controller's breakout board.

You can now test that the PWM speed value is being received by the DigiSpeed-XL™. Set the spindle speed to zero typing it into the speed DRO, or entering the command 'S 0' into the MDI window .

Now Click on the “Spindle” button, or use the 'M03' command in MDI mode. You should be able to observe the DigiSpeed-XL™ Mode Indicator LED perform a Red lazy double flash. This indicates that the DigiSpeed-XL™ is enabled.

Now enter a spindle speed of 1000 into the DRO. You should now observe the DigiSpeed-XL™ Mode Indicator LED perform a continuous Red fast flash. This indicates that the DigiSpeed-XL™ is enabled and is generating an analog control voltage on the output.

Additionally, you should observe that the Zero Speed relay indicator has extinguished.

5.6 Connect the Spindle Direction

If you are planning to use the Spindle direction control, wire Pin 3 of the MiniDin breakout board (DigiSpeed-XL™ Direction) to pin 17 of the printer port via your CNC controller's breakout board.

You can now test that the Direction signal is being received by the DigiSpeed-XL™.

Enter MDI mode in Mach3. In the MDI text entry field, enter a speed value of 100RPM by typing S1000.

Now type in M03, you should now observe the DigiSpeed-XL™ Mode Indicator LED perform a continuous Red fast flash. This indicates that the DigiSpeed-XL™ is enabled and is generating an analog control voltage on the output. Additionally, you should observe that the Zero Speed relay indicator has extinguished.

Now type in M04, you should observe that the Dir Relay indicator has illuminated.

5.7 Connect the Spindle Index Input

If you are planning to use the Spindle Index sensor input, wire Pin 5 of the MiniDin breakout board (DigiSpeed-XL™ Index Sensor Input) to pin 15 of the printer port via your CNC controller's breakout board.

You may need to wait until you have connected the DigiSpeed-XL™ to your Motor speed controller before testing the Spindle Index input.

5.8 Conclusion

You should now have your DigiSpeed-XL™ operating correctly with Mach3. You are now ready to install the unit into your Motor Speed controller's enclosure, your CNC controller or a separate enclosure.

6 Installation

Before attempting the installation please read the entire manual. If you are unsure of anything, do not do the installation. Get help from someone who is qualified for this type of work. I am not responsible for damage or injury resulting from the installation or use of this device.

It is advisable to integrate the The DigiSpeed-XL™ with your control software before installing and connecting it to your Motor Controller. The unit is powered from a breakout board via the 6 pin din din cable. Therefore it is possible to test and become familiar with it's operation prior to connecting it to a motor controller.

The board has indicator LEDs that provide status of what is occurring. These can be used to assist in the integration.

The DigiSpeed-XL™ may be mounted into an existing motor controller enclosure or external enclosures. The hardware installation is dependent on what you are installing the DigiSpeed-XL™ into. The physical installation is first covered in the section below, followed by the electrical installation.

6.1 DC Motor Speed Controller housing

If the DigiSpeed-XL™ is to be installed into an existing Motor speed controller housing, ensure that there is sufficient space to safely install the DigiSpeed-XL™. The unit has on-board LED indicators, a Manual/auto switch plus a 10KΩ potentiometer.

Refer to the PCB layout and dimensions diagram in determining the positions of holes for mounting. The unit may be mounted using the 4 stand-offs provided.

6.2 Wiring installation

Once the DigiSpeed-XL™ controller is installed into a housing the following wiring is required.

6.2.1 Motor Controller Connection

The DigiSpeed-XL™ is connected to the motor controller via the three terminal pluggable connector J5.


- The terminal labeled P3 connects to the potentiometer positive voltage connector on the speed controller.
- The terminal labeled P1 connects to the potentiometer connector on the speed controller.
- The terminal labeled P2 connects to the potentiometer control voltage on the speed controller.

These three connections plug into your speed controller in place of your existing manual speed potentiometer. Unless you are using a voltage isolation board these leads are at *****MAINS VOLTAGE POTENTIAL *****. They can cause serious injury or death. Do not connect any earthed test equipment to this terminal block as it is at mains potential.

6.2.2 Mini Din Control Cable

The signals carried by the 6 pin min din connector on the DigiSpeed-XL™ are labeled as below. The picture is of the Mini din connector when looking into J2 on the DigiSpeed-XL™ controller board. All these pins are inputs to the DigiSpeed-XL™ except for pin 6, which is an output from the DigiSpeed-XL™.

- Pin 1 DOWN/DIRECTION/CLOCK
- Pin 2 ENABLE
- Pin 3 Ground (0V)
- Pin 4 Supply (+5V)
- Pin 5 PWM/ UP/STEP/DATA
- Pin 6 INDEX

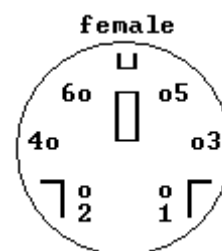

If you are using a 6 pin male to male mini din cable and a Mini din breakout board, these signals are labeled and available on the screw terminals of the minidin breakout board.

Connector J3 is an alternative to connector J2. It may be used to connect to the board without the use of a 6 pin min-din cable. The pin assignments for J3 are:

- Pin 1 PWM/ UP/STEP/DATA
- Pin 2 GND
- Pin 3 DOWN/DIRECTION/CLOCK
- Pin 4 ENABLE
- Pin 5 Supply (+5V)
- Pin 6 INDEX

Note: Pin 1 of the connector has a square pad on the overlay. The remaining pins are numbered sequentially.

6.2.3 Spindle Index sensor Cable

The DigiSpeed-XL™ connector J1 is a 3.5mm Stereo jack. It can be used to route your index sensor to your motherboard via the 6 pin mini din cable.

The segments on the stereo plug that is used with this connector are labeled as below;

- TIP – Spindle index signal
- MIDDLE – Positive supply (5V)
- BARREL – Ground (0V)

If your spindle index sensor is powered by 5V it can be connected via this interface. If you are using a 6 pin male to male mini din cable and a Mini din breakout board, the index signal will be available on the screw terminals of the breakout board.

Note: You should only insert or remove the 3.5mm stereo connector while there is no power applied to the DigiSpeed-XL™.

Connector J7 is an alternative to connector J1. It may be used to connect an index sensor to the board without the use of a 3.5mm Stereo Jack connector. The pin assignments for J7 are:

- Pin 1 Ground (0V)
- Pin 2 INDEX
- Pin 3 Supply (+5V)

Note: Pin 1 of the connector has a square pad on the overlay. The remaining pins are numbered sequentially.

6.2.4 Potentiometer flying leads

If you are using an existing manual speed potentiometer, the three flying leads from the manual speed potentiometer that were plugged into the DC speed controller are now plugged into the connector block J4 on the DigiSpeed-XL™. The potentiometer lead that was connected to the potentiometer positive voltage supply is connected to P3 on J4. The potentiometer lead that was plugged into the potentiometer 0V supply is connected to P2 on J4. The control voltage lead on the potentiometer is plugged into P2 on J4.

Note: If you plan to use J4 in place of the on-board manual speed potentiometer, make sure that you notify Homann Designs at the time of placing the order.

6.2.5 Initial Testing

The initial testing of the DigiSpeed-XL™ installation should be conducted with the DigiSpeedXL™ **NOT** connected to your computer or breakout board.

6.2.5.1 Manual Speed potentiometer Control

1. Set the Auto/Manual speed control switch to the manual position, towards the potentiometer, away from the MiniDin connector.
2. Turn the manual speed potentiometer fully counter clockwise.
3. Switch on the power to the motor controller. The spindle should not rotate. If anything appears wrong, immediately switch off the power to the motor controller.
4. Now slowly turn the potentiometer clockwise. The spindle should start to rotate until maximum speed is obtained.

6.2.5.2 Computer Speed Control.

To test the DigiSpeed-XL™ control from Mach3:

1. Turn off the Motor Speed controller and the CNC controller .
2. Set the Auto/Manual speed control switch to the Auto position, towards the MiniDin Connector, away from the manual speed potentiometer.
3. Plug the 6 pin MiniDin connector into the DigiSpeed-XL™ unit and the breakout board.
4. Turn on the Motor Speed controller, then the CNC controller. Ensure that there is 5Vdc power applied to the DigiSpeed-XL™. You can verify this by the Solid Red LED illuminated on the DigiSpeed-XL™.
5. Run through the tests detailed in the Quick Start Guide section with the understanding that the spindle is not powered and operational.

7 Operation

7.1 Operation Modes

The DigiSpeed-XL™ has four operational modes, selected by jumpers MS1, MS2 in jumper block JP1. The selection of the modes is described below.

<i>Mode</i>	<i>MS1</i>	<i>MS2</i>
PWM	Removed	Removed
STEP/DIR	Installed	Removed
UP/DOWN	Installed	Installed
SERIAL	Removed	Installed

Table 5: Mode Selection Jumpers

The selection of the mode is done at power up initialization.

If the mode selection jumpers are modified after the unit is powered up, the new mode will not take effect until the power is cycled.

Each of the modes is discussed in detail below.

7.1.1 PWM Input Mode

In this mode the DigiSpeed-XL™ controller accepts an “**Active Low**” Pulse Width Modulation signal. The duty cycle of this signal represents 0 to 100% of maximum spindle speed.

The PWM signal period can be in the range of 2Hz to 50Hz. The optimum period is 5Hz. This will provide 1023 speed increments from 0 to 100% of maximum spindle speed.

The mini-din pins used for this mode are;

- Pin 2 ENABLE
- Pin 3 Ground (0V)
- Pin 4 Supply (+5V)
- Pin 5 PWM

With +5V is supplied to the DigiSpeed-XL™ module, the LED will be a solid Red color when the ENABLE signal is not active.

When the ENABLE line is set active (0v), and no PWM signal is present, the LED will be a Red slow double flash. This indicates that the spindle is active but the speed is set to 0

%. Then, when a PWM signal is present with an active ENABLE line, the LED will be a fast continuous flash, indicating that the spindle is active and the speed is set to a value greater than 0 %.

Note: If a PWM signal is present, but the ENABLE input is inactive. The LED will be a Red slow double flash. As soon as the Enable is made active, the Spindle will start, setting the speed to the commanded PWM value.

7.1.2 Step/Dir Mode

In this mode the DigiSpeed-XL™ controller accepts an “**Active Low**” STEP signal, along with an increase (0v) or decrease (+5V) DIR signal.

With +5V is supplied to the DigiSpeed-XL™ module, the LED will be a solid Green color when the ENABLE signal is not active.

The DigiSpeed-XL™ controller keeps an internal speed counter that retains the current speed value for as long as power (+5V) is supplied to the module. On power up the speed counter is set to 0. The counter is limited to a range of 0 to 1023. And steps that try to count outside this range will be ignored with the speed counter being limited.

On each high to lo transition of the STEP line the speed counter will be updated. If the DIR line is low, the speed counter will be incremented. If the DIR line is high, the speed counter will be decremented.

The speed counter is operational regardless of the state of the Enable signal. Therefore, if the Step line is active while the ENABLE line is not active, the speed counter will be updated. This allows the speed of the DigiSpeed-XL™ to be set into the speed counter before the spindle is turned on via the ENABLE line.

This feature is analogous to the S word in the G-Code language. For example, if the G-Code sets the speed by, say, S1000, the PC CNC controller software can immediately update the speed counter in the DigiSpeed-XL™ controller. Then when the G-Code turns on the spindle with the M03 command, by making the ENABLE signal active, the spindle will start with the speed set to previously set speed counter value.

As part of the software initialization for any PC CNC controller software that uses the DigiSpeed-XL™ in STEP/DIR mode, the software should on initialization, issue at least 1023 steps with the DIR signal set to decrease speed (+5v). This will ensure that the speed counter in the DigiSpeed-XL™ is set to zero. This procedure should also be done whenever the PC CNC software and the DigiSpeed-XL™ speed counter get out of synchronization.

The mini-din pins used for this mode are;

- Pin 1 DIR
- Pin 2 ENABLE
- Pin 3 Ground (0V)
- Pin 4 Supply (+5V)

- Pin 5 STEP

7.1.3 Up/Down Mode

In this mode the DigiSpeed-XL™ controller accepts “**Active Low**” UP and DOWN signals.

With +5V is supplied to the DigiSpeed-XL™ module, the LED will be a solid Green color when the ENABLE signal is not active.

The DigiSpeed-XL™ controller keeps an internal speed counter that retains the current speed value for as long as power (+5V) is supplied to the module. On power up the speed counter is set to 0. The counter is limited to a range of 0 to 1023. And steps that try to count outside this range will be ignored with the speed counter being limited.

.On each high to lo transition of the UP line, the speed counter will be incremented. On each high to lo transition of the DOWN line, the speed counter will be decremented.

The speed counter is operational regardless of the state of the Enable signal. Therefore, if the UP or DOWN line is active while the ENABLE line is not active, the speed counter will be updated. This allows the speed of the DigiSpeed-XL™ to be set into the speed counter before the spindle is turned on via the ENABLE line.

This feature is analogous to the S word in the G-Code language. For example, if the G-Code sets the speed by, say, S1000, the PC CNC controller software can immediately update the speed counter in the DigiSpeed-XL™ controller. Then when the G-Code turns on the spindle with the M03 command, by making the ENABLE signal active, the spindle will start with the speed set to previously set speed counter value.

As part of the software initialization for any PC CNC controller software that uses the DigiSpeed-XL™ in UP/DOWN mode, the software should on initialization, issue at least 1023 DOWN steps. This will ensure that the speed counter in the DigiSpeed-XL™ is set to zero. This procedure should also be done whenever the PC CNC software and the DigiSpeed-XL™ speed counter get out of synchronization.

The mini-din pins used for this mode are;

- Pin 1 DOWN
- Pin 2 ENABLE
- Pin 3 Ground (0V)
- Pin 4 Supply (+5V)
- Pin 5 UP

7.1.4 Synchronous Serial Mode

In this mode the DigiSpeed-XL™ controller accepts commands via a synchronous serial interface

With +5V is supplied to the DigiSpeed-XL™ module, the LED will be a solid Yellow color when the ENABLE signal is not active.

The mini-din pins used for this mode are;

- Pin 1 CLOCK
- Pin 2 ENABLE
- Pin 3 Ground (0V)
- Pin 4 Supply (+5V)
- Pin 5 DATA

There are three commands that can be used to control the DigiSpeed-XL™ controller;

- Set Speed with motor offsets enabled
- Set Speed with motor offsets disabled
- Write Motor offset to Flash memory

7.1.4.1 Interface Specification

The synchronous serial interface consists of three signals, an Enable signal (Pin 2), a data signal (pin 5) and a clock signal (pin 1).

The Enable signal is an active low signal. 0 volts on this line enables the analog voltage output. The serial interface is still operational, even though the Enable line is not active.

The serial data expects the LSB of a byte first.

The Data is clocked into the DigiSpeed-XL™ on a negative transition of the clock signal. The maximum speed of the clock signal is 10KHz.

If there is no activity on the clock signal for 200ms, the serial interface is reset. This is a safety feature that also allows for the serial interface to automatically re-synchronize to a broken data stream.

7.1.4.2 Command Format

Each serial command consists of four bytes. The first byte is the command byte. The next two bytes are data bytes, defined by the particular command. The fourth and final byte is an End byte.

CMD	Data1	Data2	END
-----	-------	-------	-----

7.1.4.3 Set Speed with motor offsets enabled

This command sets the output voltage level, with the output value adjusted by the motor offsets stored in the DigiSpeed-XL™. The voltage may be set from 0 to 100% in steps from 0 to 1023.

The CMD byte is set to the character 'S' (0x53h)

Data1 and Data2 are combined to make a 10 bit voltage value. The four high bits of Data1 are ignored.

The END byte is set to the character '<CR>' (0x0Dh).

To set the output voltage to 50%, with motor offsets, the following command is sent.

0x53	0x01	0xFF	0x0D
------	------	------	------

To set the output voltage to 100%, with motor offsets, the following command is sent.

0x53	0x03	0xFF	0x0D
------	------	------	------

7.1.4.4 Set Speed with motor offsets disabled

This command sets the output voltage level, without the output value adjusted by the motor offsets stored in the DigiSpeed-XL™. The voltage may be set from 0 to 100% in steps from 0 to 1023.

The CMD byte is set to the character 'S' (0x73h)

Data1 and Data2 are combined to make a 10 bit voltage value. The four high bits of Data1 are ignored.

The END byte is set to the character '<CR>' (0x0Dh).

To set the output voltage to 50%, with motor offsets, the following command is sent.

0x73	0x01	0xFF	0x0D
------	------	------	------

To set the output voltage to 100%, with motor offsets, the following command is sent.

0x73	0x03	0xFF	0x0D
------	------	------	------

7.1.4.5 Write Motor offset to Flash Memory

This command writes a motor offset into the DigiSpeed-XL™. There are 64 offsets that cover the 1024 voltage settings. The offset is added to the voltage setting before being converted to an analog voltage.

If the resultant voltage setting exceeds 1023, it will be limited to 1023.

Each offset value covers 16 voltage settings. Offset 0 is added to voltage settings 0 to 15. Offset 1 is added to voltage settings 16 to 31, etc.

The CMD byte is set to the character 'S' (0x57h)

Data1 is the Motor Offset index. The valid range for the index is 0 x00h to 0x3Fh.

Data2 is the Motor Offset Value for the particular index. The valid range for the offset value is 0 x00h to 0xFFh.

The END byte is set to the character '<CR>' (0x0Dh).

To set the motor offset at index 4 to 15, the following command is sent.

0x57	0x04	0x0F	0x0D
------	------	------	------

The following motor offsets are pre-programmed into the DigiSpeed-XL™. These are the offsets used for a DC motor setup on a Taig CNC Mill.

		Low Nibble															
H i g h N i b b l e		x0	x1	x2	x3	x4	x5	x6	x7	x8	x9	xA	xB	xC	xD	xE	xF
	0	88	86	84	82	80	78	76	75	73	71	69	67	65	64	62	60
	1	59	57	55	53	51	50	49	48	46	44	43	42	41	40	38	36
	2	34	32	30	28	26	25	24	23	22	20	18	17	16	15	13	12
	3	11	10	8	7	6	5	4	3	2	1	0	0	0	0	0	0

7.2 Motor Compensation Offsets

The DigiSpeed-XL™ contains programmable offsets. The offsets are added to the commanded output voltage value. The purpose of these offsets is to add a voltage to the output so as to overcome non-linearities in the speed curve due to drag and inefficiencies in the motor drive system.

Most low cost motor controllers will benefit from having the offsets applied. Motor controllers with internal compensation may not need the application of the DigiSpeed-XL™ offsets.

The DigiSpeed-XL™ is capable of generating 1024 separate speed increments between 0 and 100% . There are 64 programmable offset values. Each offset covers a block of 8 speed increments. Each compensation value may range between 0 and 255.

When selected, the final output voltage is calculated as;

$V_{out} = \text{PWM duty cycle percentage} \times 1023 + \text{compensation value.}$

The V_{out} value is then limited to 1023 or less.

The MOT jumper controls whether the programmed motor offset compensation values are applied. When inserted the MOT jumper on Jumper Block JP1 disables the motor compensation offsets from being added to the commanded speed.

7.3 Control Voltage Inversion

The INV jumper on Jumper Block JP1 is used to configure the DigiSpeed™ for use with Motor Speed controllers that accept an inverted 10Vdc – 0V control voltage. Motors connected to this type of controller generate maximum speed when the control voltage is 0V and are stationary when the control voltage is 10Vdc.

To use the DigiSpeed with this type of controller, the PC software generating the PWM signal to the DigiSpeed is required to produce a 100% duty cycle PWM signal for maximum speed and a 0% duty cycle for zero speed. For Mach3, the active low step signal check box need to be unticked.

Additionally, the DigiSpeed is informed that an inverted control signal is being used so that it can correctly energise the two on-board relays and indicate the correct controller state via the mode indicator LED.

With the INV jumper inserted, an average PWM input signal of 5V is interpreted as Maximim Speed. An average PWM input signal of 0V is interpreted as minimum speed (off) and the Zero Speed relay will be energised.

Do NOT use this jumper unless your motor controller requires this.

8 Board Dimensions

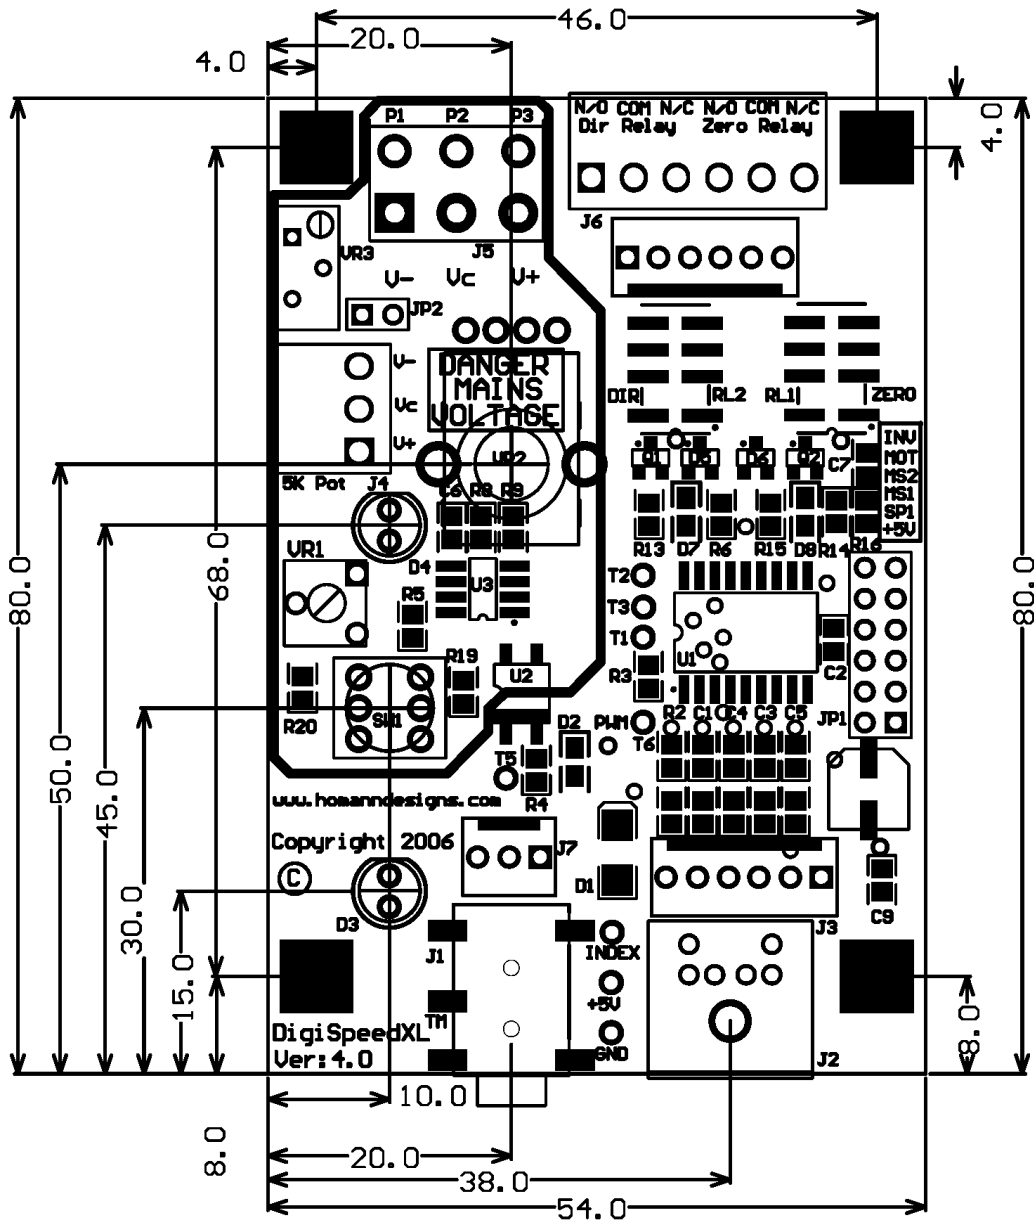


Illustration 7: PCB Dimensions and Layout